



1 x 40mm pipe full height within the weir, the other is half height with the ball valve attached below the tank. When the ball valve is closed slightly the water level in the weir rises to make it silent. The small return comes up over the weir and jets to your desired location within the tank. Use a small bit of flexi pipe to connect from the pump the barbed fitting supplied. The full height 40mm pipe is a safety pipe so only gets used if the other gets blocked for some reason.